


5C node card
Vacuum pipe

CFE-5C-PS1
SW-5C-SW108
b2-q89-ps
y6-q6-qp
CFE-5C-PS3

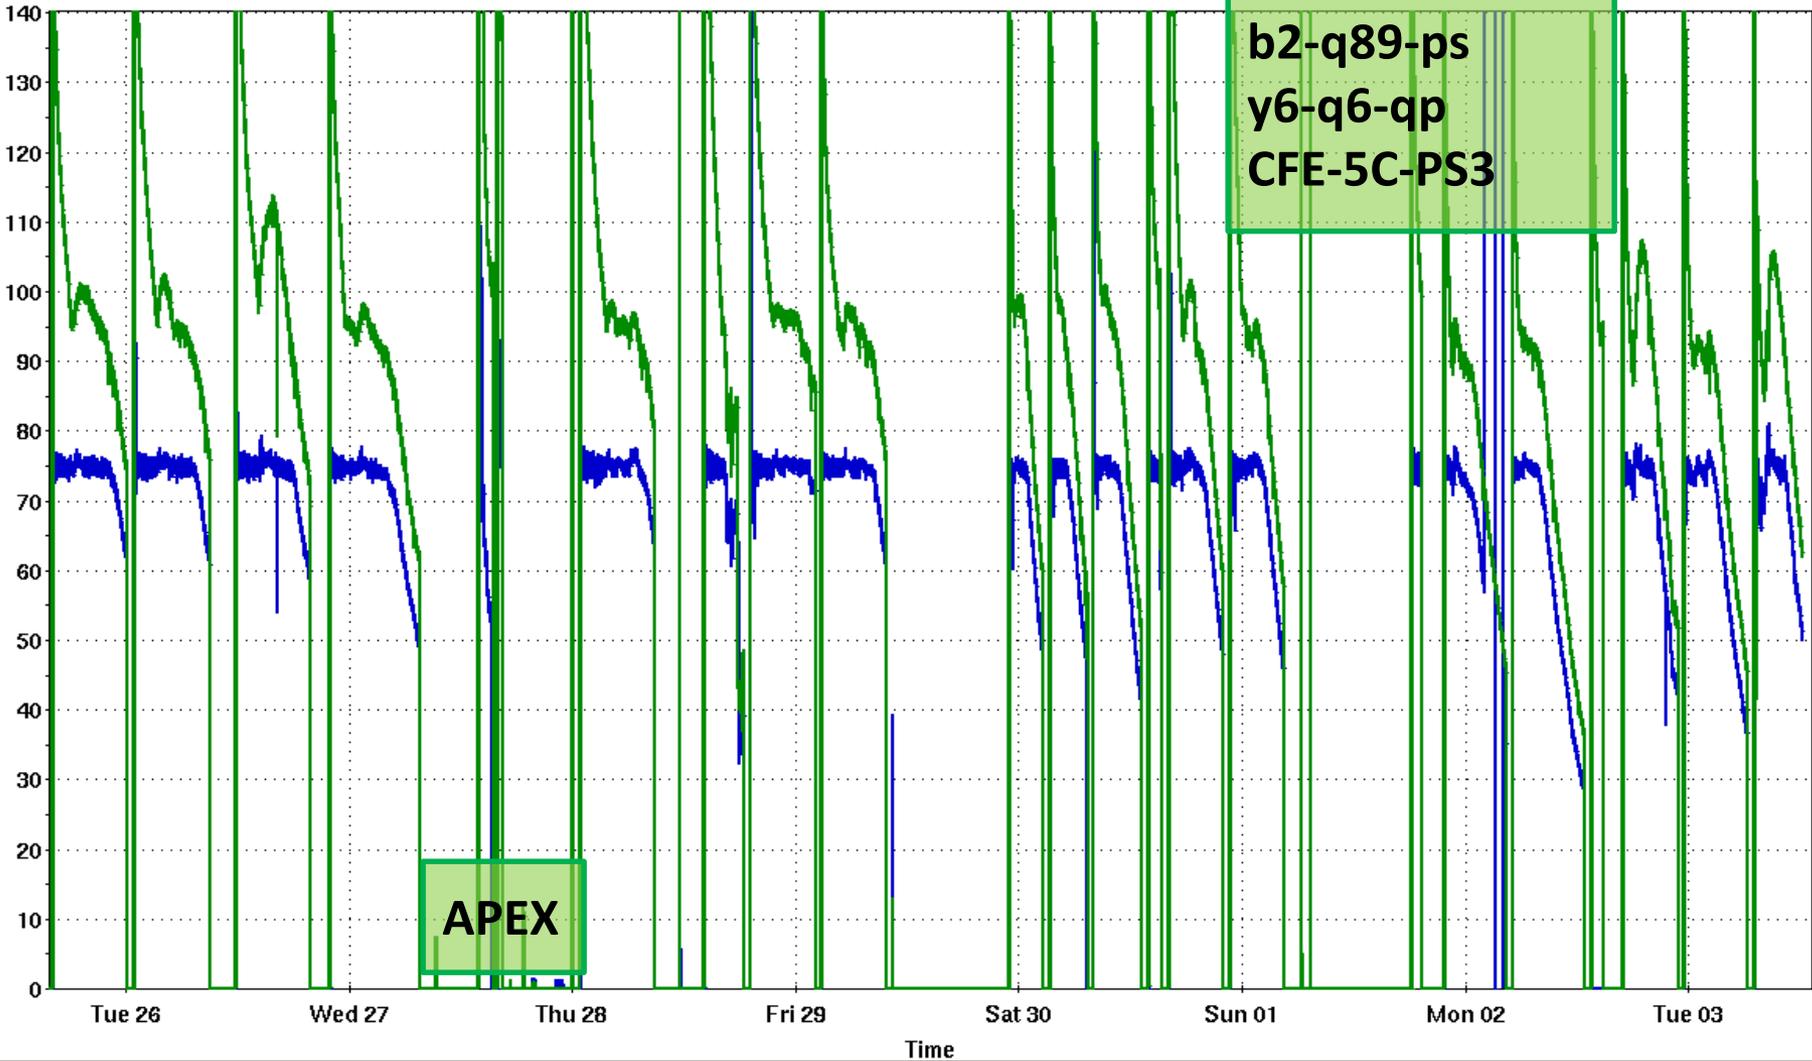

1. 1 UPS -> AC reset -> 6 node cards -> ~50 yellow corrector power supplies -> yellow injection kicker ceramic pipe

1. CFE-5C-PS1 and PS3, plugged in wall power

2. Higher yellow vacuum -> Intensity $2.0E9$ and $1.8E9$

3. Store length: 7 hours

4. 56 MHz will be turned ON from next store